



RIDELINK APP

Download Giant RideLink App

The Giant RideLink App is available for Apple® iOS and Android system. Please go to the App Store or Google Play to search Giant RideLink App and download it.

Giant RideLink 應用程式適用於 Apple® iOS 及 Android 系統，請至 App store 或是 Google Play 搜尋 RideLink 下載應用程式。



iOS: <https://itunes.apple.com/tw/app/ridelink/id1361498436?mt=8>

*iOS system must be version 9.0 or higher version.



Android: <https://play.google.com/store/apps/details?id=tw.giant.ridelink>

*Android system must be version 5.0 or higher version.



Personal data setting



User Information

*User Name

*Height cm ▾

*Weight kg ▾

Gender ▾

Date of Birth ▾

*FTP

by saving you agree to Giant's Terms and Conditions

Done

When using RideLink for the first time, you need to fill out the basic information.

當第一次使用 RideLink，需填寫基本資料

Select the device



POWER METER



SMART TRAINER



RideLink

Select your device

選擇您的裝置


Change the language



Go to Parameter page. Choose “Language” and select your language.

到 Parameter page，點選 Language，即可選擇語言

Bluetooth device connection

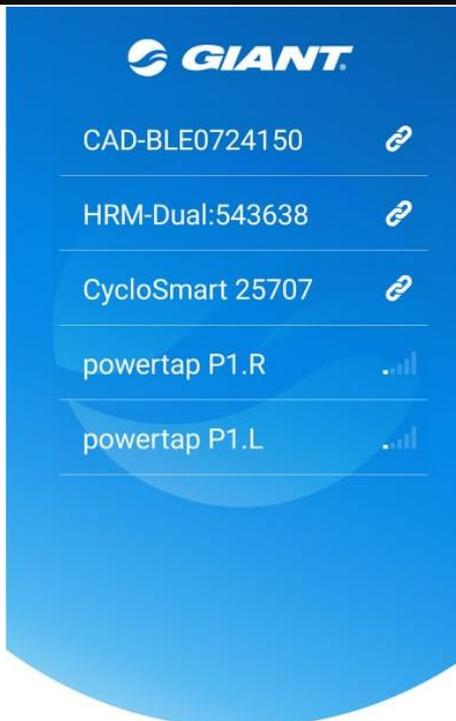

Connect the heart rate or Bluetooth sensor availability.

可連結心跳帶或其他 Bluetooth 裝置使用

回上一頁


CycloSmart Pairing Procedures with RideLink

1

Open the RideLink app and switch on the Bluetooth Smart of your Smartphone.

開啟 RideLink 應用程式，並開啟手機藍芽傳輸功能


2

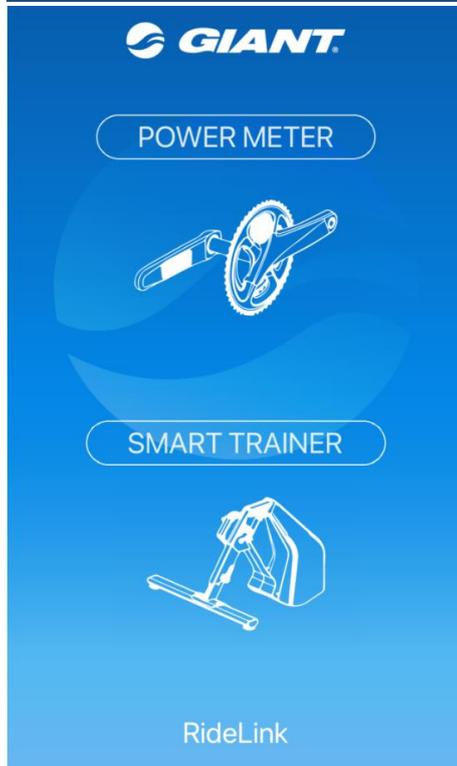

Choose Smart trainer

點選 Smart trainer 進入

3

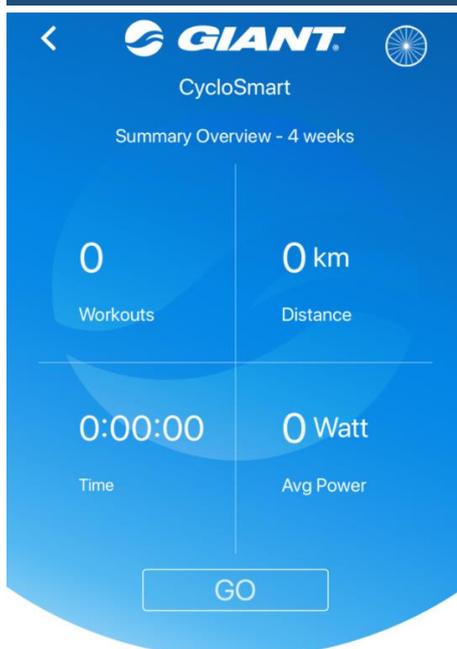

Choose the Bluetooth icon in the lower left corner of main page.

The LED blinks until connection with RideLink.

於主頁面，點選左下角 Bluetooth 圖示

並請確認在未進行任何配對前，燈號應都為閃爍，連線後，燈號恆亮



4

Scan and choose your CycloSmart to pair.

搜尋並點選連接 CycloSmart

5



Pair icon appears, pairing is finished.

連結圖示出現後表示已連接 CycloSmart

Spindown

If there is a new firmware version, please update the firmware then perform the Spindown process.
若有新版韌體，請更新完韌體再執行 Spindown

1

Back to main page when pairing your CycloSmart.
連線後，回到主頁面

2

Please ride your CycloSmart for approximately 5 minutes before performing a Spindown functionality.
在進行 Spindown 之前請騎乘 CycloSmart 大約 5 分鐘

3

Press "Parameter" icon to enter parameter page.
點選 Parameter 進入頁面

4



Press "Spindown" icon to enter Spindown page.
點選 Spindown 進入頁面

5

< CycloSmart Spindown

A spindown is used to determine the power required to overcome several mechanical losses on your CycloSmart trainer. Giant recommend user conduct a spindown before every ride for maximum power accuracy, please ride for approximately 5 minutes before performing a spindown.

Start The Process

Slowly spin-up to 28 mph/45 kph, then stop pedaling and let the trainer spindown freely.

Spindown

Target Speed : 45.0 kph

Current Speed : 0 kph

Done

Press “Start the process” and begin the Spindown.

點選 Start the process · 開始執行 Spindown

6

Start to pedal, increase the speed to 28mph/45kph.

開始踩踏 · 緩慢的加速至 28mph/45kph

7

When reaching the speed, RideLink will show a message. Please stop to pedal. Perform Spindown two times.

當達到速度後 · RideLink 會出現提示視窗 · 請停止踩踏 · 需執行兩次

8

Press “Done” to finish the Spindown functionality.

當 Spindown 完成後 · 點選 done 結束

Firmware updated procedures with RideLink

1

Go back to the main page after pairing your CycloSmart.

連線後，回到主頁面

2

Press "Parameter" icon to enter parameter page.

點選 parameter，進入頁面

3



Press "firmware update" and press "Yes" to start firmware update.

點選 firmware update，按下 Yes 開始 firmware update

4

Check if the Bluetooth/ANT+ LED on the CycloSmart is blinking or not.*

* After the firmware update status reaches 100%, the Bluetooth/ANT+ LED will start blinking. It is indicated that the firmware update is completed.

確認 Bluetooth/ANT+ LED 是否閃爍*

*Firmware update 狀態達 100%後，Bluetooth/ANT+ LED 會開始閃爍，此表示 firmware update 完成

5

Remove the power adapter at least 5 seconds. Re-connect the power adapter.

將 CycloSmart 電源變壓器拔除 5 秒以上，再插入電源變壓器


6

Turn off RideLink and open it again. Re-pair your CycloSmart and perform the Spindown

將 RideLink 關閉，重新開始連接 CycloSmart，並執行 Spindown

CycloSmart training modes


Resist mode

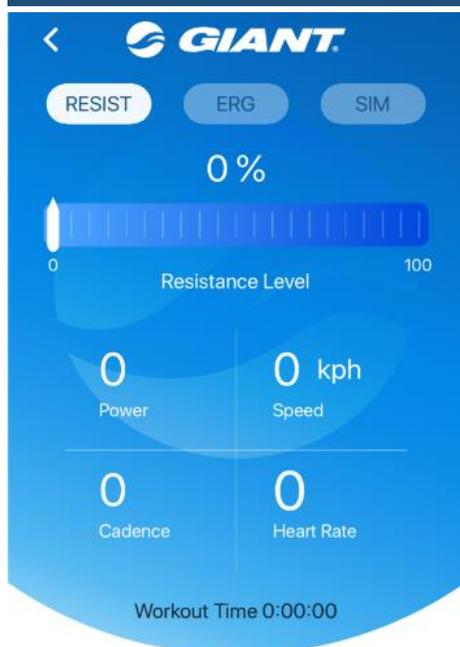

Resist mode: This is the training mode for constant resistance output. Adjust the required resistance output percentage. The resistance is constant output. It will not be changed by current speed.

Resist mode：此為調整阻力輸出百分比之訓練模式，調整所需的輸出阻力百分比，恆定的輸出阻力不會因目前的速度快慢而改變。

ERG mode

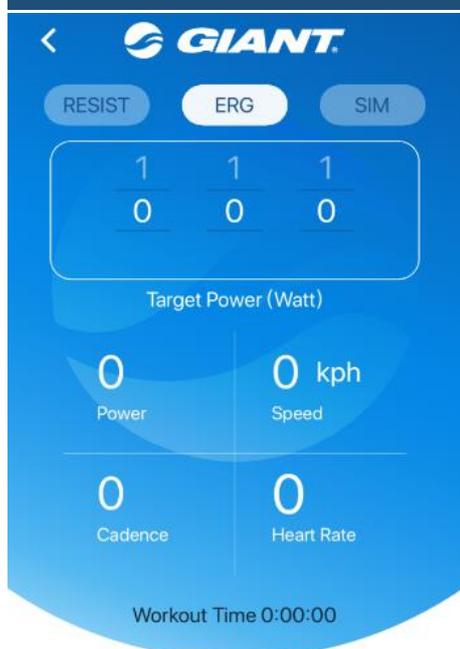

ERG mode: This is the training mode for constant power output. Enter the required power value. The CycloSmart will automatically generate the appropriate resistance according to the current speed to reach the chosen power value.

ERG mode：此為恆定功率之訓練模式，輸入所需之功率數值，CycloSmart 會依據目前的騎乘速度，自動產生適當的阻力，達到設定的功率數值

SIM mode



SIM mode: This is the training mode for simulation. Input slope (%) and wind speed (km/h) values, the CycloSmart will automatically generate appropriate resistance according on setting values and the current speed to reach a simulated real riding situation.

SIM mode：此為模擬訓練模式，輸入坡度及風速參數，CycloSmart 會依據此參數及目前的騎乘速度，自動產生適當的阻力，達到模擬真實的騎乘情境